
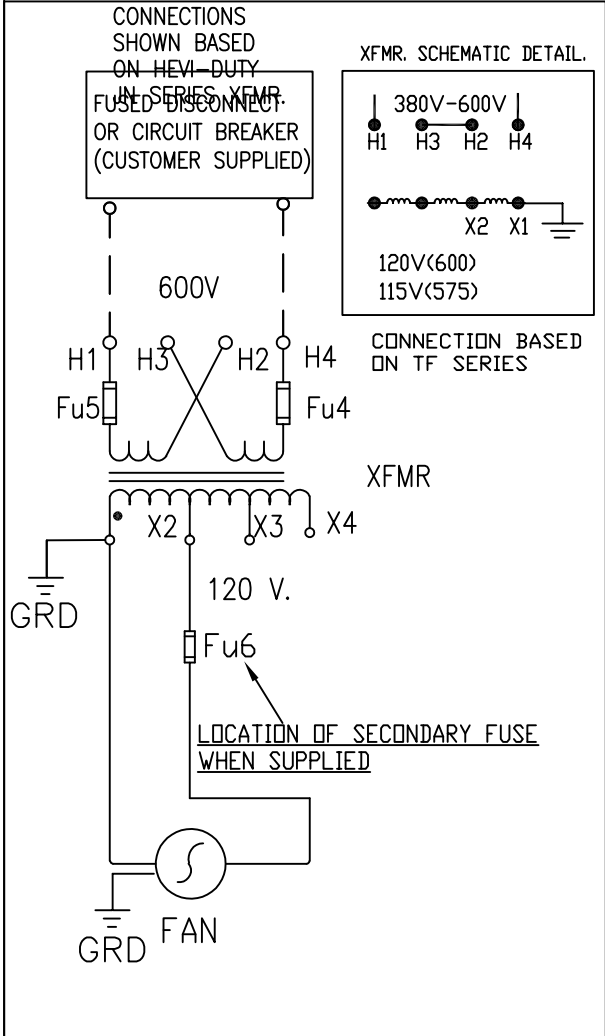
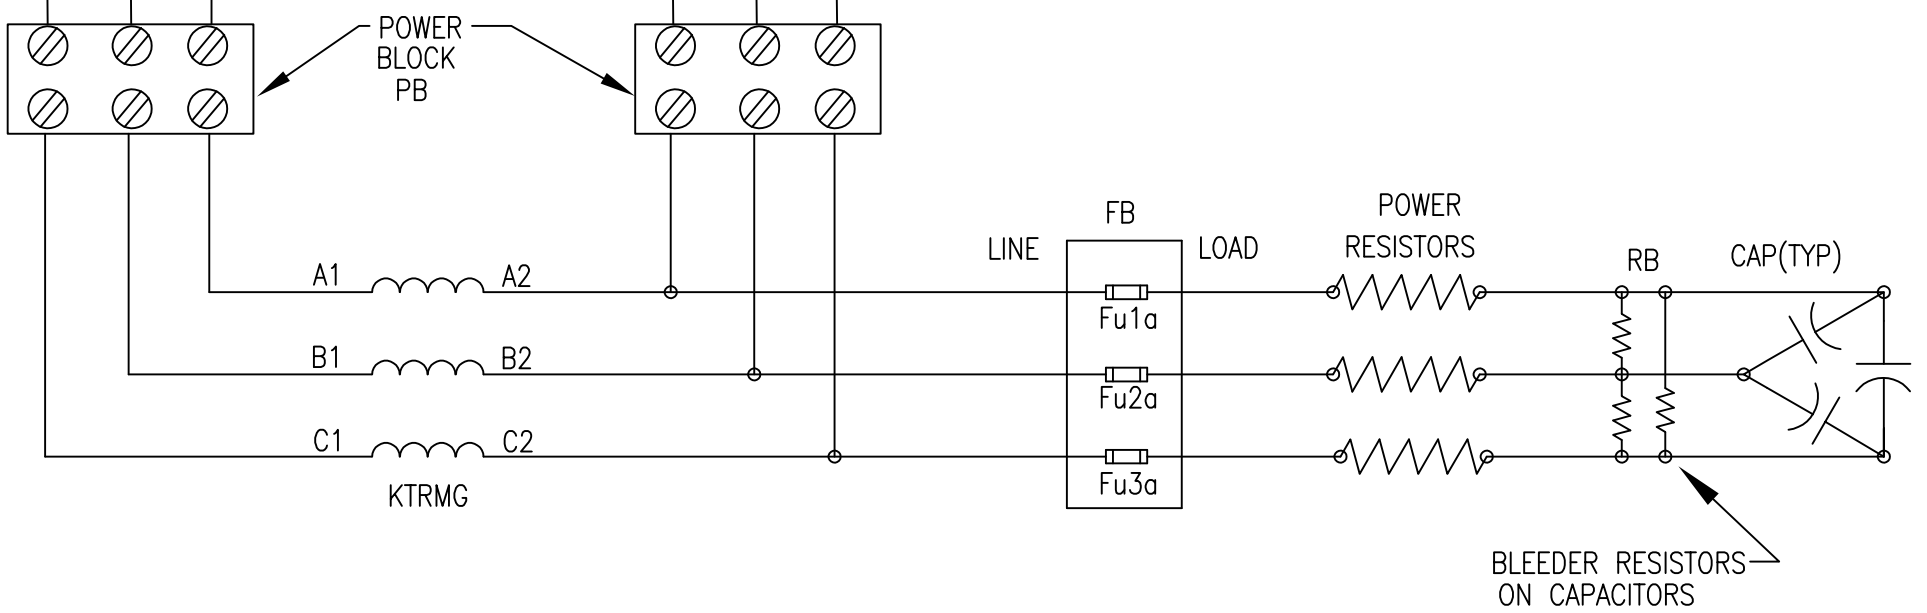
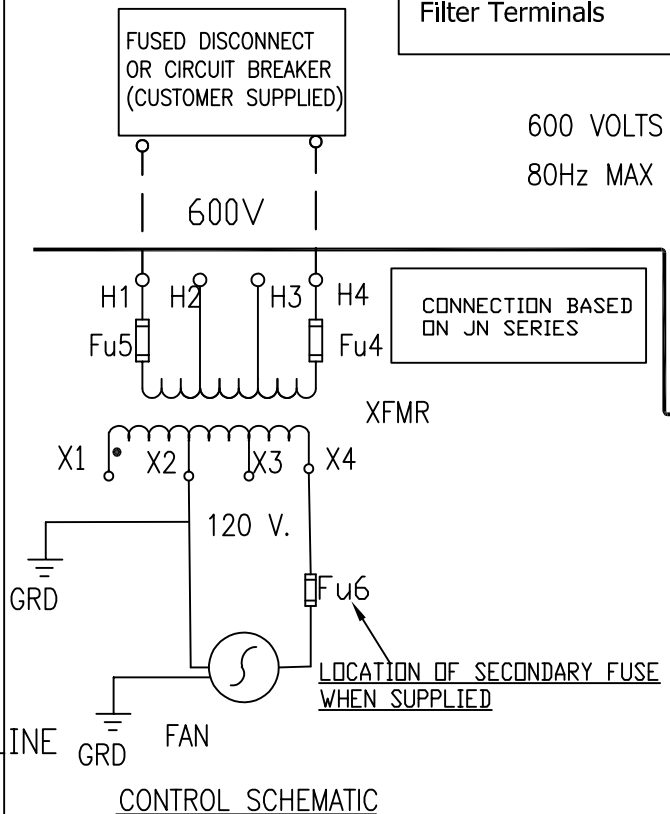


DO NOT:
Connect Transformer
To VFD Output Or Any
Filter Terminals

CUSTOMER CONNECTIONS
INTO SINEWAVE FILTER

USE COPPER WIRE
60°C MIN <100 A.
75°C MIN >100 A.

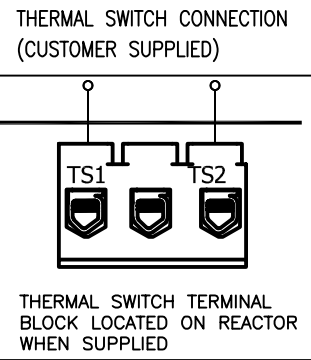

CUSTOMER IS RESPONSIBLE FOR INSTALLATION
TO MEET ALL NATIONAL AND LOCAL ELECTRICAL CODES

| | | | | |
|----|----------|------|----|---------------------------------|
| | | | | TOLERANCES (EXCEPT AS NOTED) |
| | | | | DECIMAL |
| | | | | .XX ± NA |
| | | | | .XXX ± NA |
| | | | | FRACTIONAL |
| | | | | ± 1/32 |
| | | | | ANGULAR |
| | | | | ± 1/2° |
| NO | REVISION | DATE | BY | |

TCL® W132 N10611 Grant Drive
Germentown, WI 53022

SineWave Filter
55Amps 600V

| | | |
|-----------------|--------------------|-----------------------|
| DRN. BY DSW | DATE 10/12/2010 | DWG. NO. 24281-21A |
| SCALE TO FIT | APRVD. | B |

SHT. 1 of 1